

PanoLock™ Multi-Point Lock Instructions

Lock Assembly & Handing




8817 West Market Street
Colfax, NC 27235 | 800.334.2006
www.enduraproducts.com

STEP 1



Ensure lock mortise in panel edge is clear of dust and debris.

STEP 2

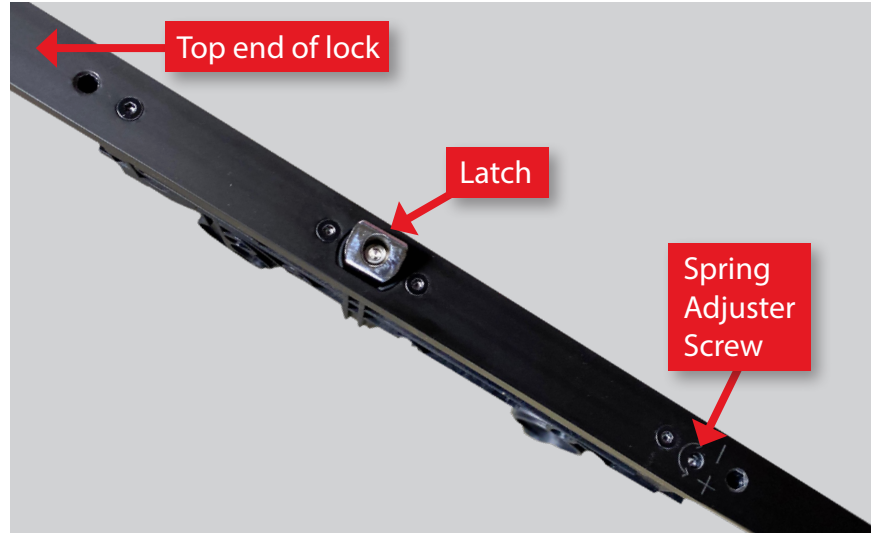


Orient lock assembly as shown.

STEP 3




Place lock assembly in mortise pocket.

STEP 4

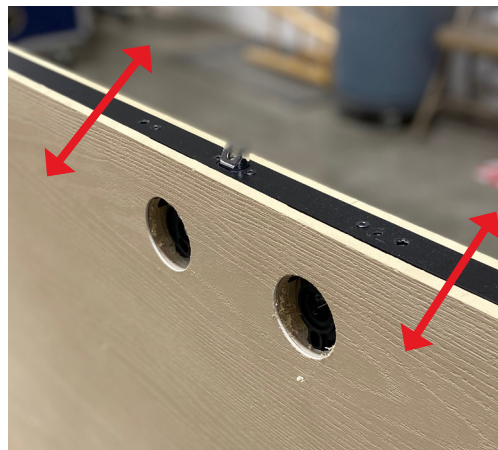


Check to confirm proper placement of the lock. Ensure entire length lock face plate is flush with edge face of panel. If lock does not sit flush, remove lock and check for debris in pocket. It may be necessary to verify mortise pocket dimensions if no debris or contamination is present.

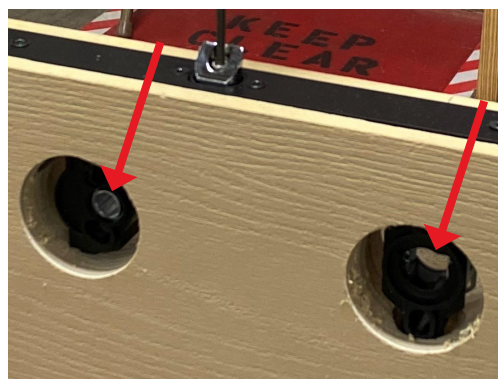

Ensure lock drive hubs align with panel face bores

STEP 5

Secure lock with installation screws.

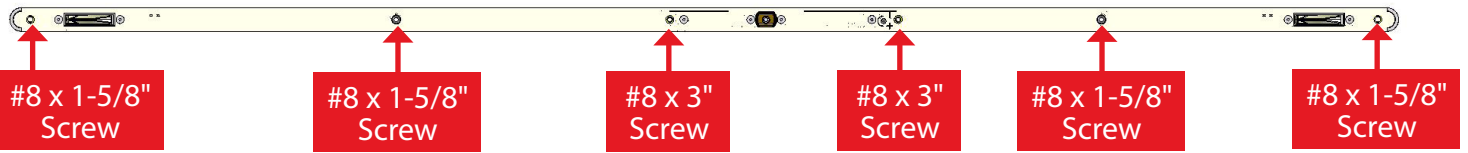

Two #8 x 3" Screws: Place through open holes just above the latch, and just below the spring adjuster screw.




Four #8 x 1-5/8" Screws: Place through remaining open holes.

STEP 6



LockHanding-The angled surface of the latch faces the strike plate.

STEP 7


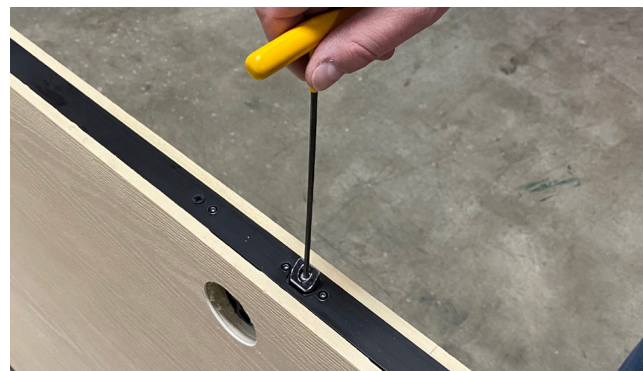


To rehand the lock, loosen the latch screw with a 9/64" allen wrench.


STEP 8



Lift latch away from lock, rotate 180 degrees, place back into lock.

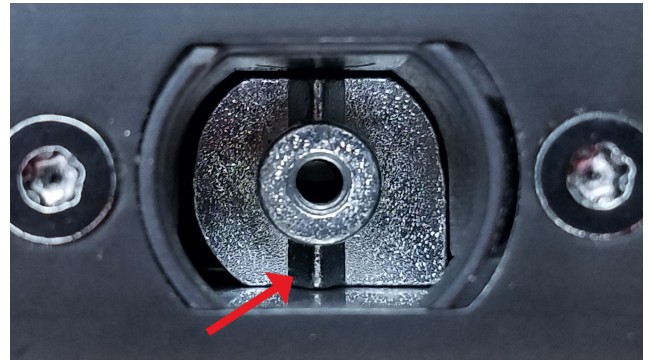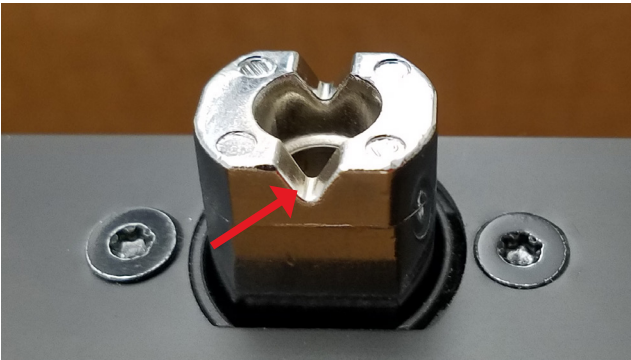

Slots on back of latch must align with ribs at bottom of latch hole.

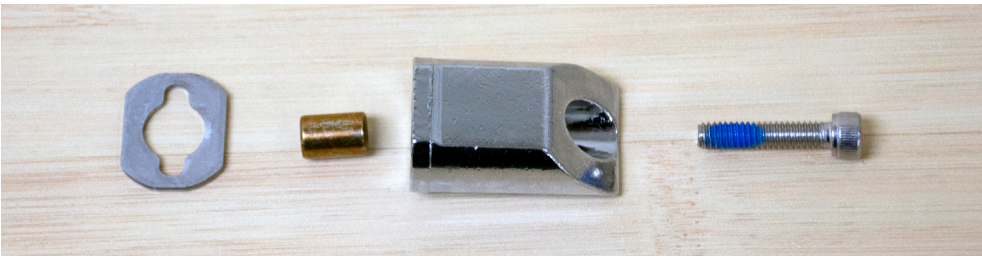

Note placement of roller sleeve, latch and screw.

STEP 9



Tighten screw to secure latch in place.

STEP 10

Check lock function.



Place a flat head screwdriver next to the pin.



Use the screwdriver to push the pin to the right. The latch should fully retract.



Push down on either of the multipoint latches. The latch should remain extended.



Push down on the center latch. The latch should remain extended.



Move the pin button back to the starting position to disengage the upper, lower, and center latches.