

# Wood Veneer Ultimate Astragal - (Inswing)

## Trimming & End Cap Installation Instructions


**Endura**  
DOOR COMPONENT SYSTEMS  
800.334.2006  
8817 West Market Street  
Colfax, NC 27235

### 1 SIZING INSWING HEIGHT


Remove astragal bolts (and strike support if applicable) and trim astragal body to desired length (A).

**NOTE:** Always trim astragal from top, ensuring that the "U-shaped" cutout length is 3/4" or longer.


Next, cut down only the thicker side of the astragal an additional 9/16" inches (B) to create a notch for the trim cap to be applied in step 2.

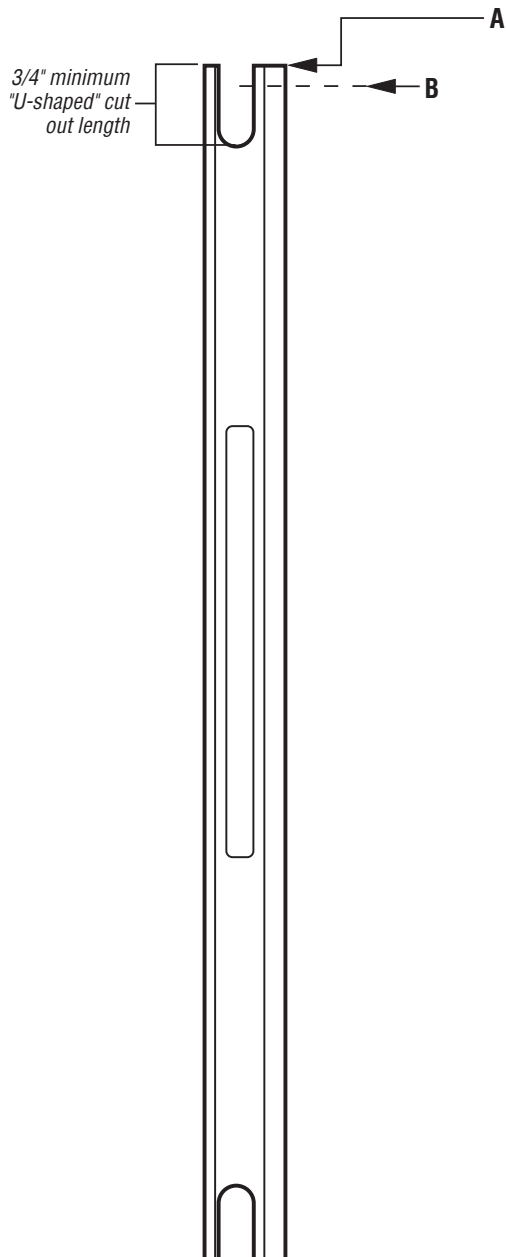

### Top of Inswing Astragal

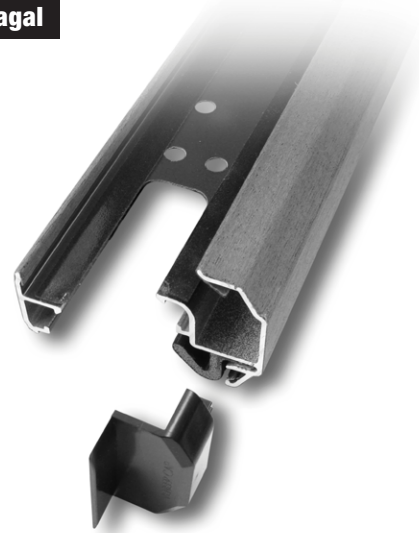

### Bottom of Inswing Astragal

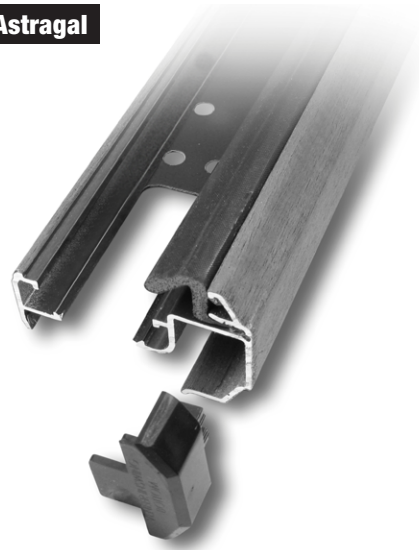

- 2** Follow Endura's Ultimate Astragal/Ultimate Astragal Lite Pre-Hanger Installation Instructions for completion of installation procedure.