

PanoLock™ Multi-Point Lock Instructions

Strike Plate Assembly & Adjustment



8817 West Market Street
Colfax, NC 27235 | 800.334.2006
www.enduraproducts.com

STEP 1



Ensure strike plate mortise is clear of dust and debris.

STEP 2




Place the reinforcing roller plate into the mortise and align the tabs shown with the edge of the frame. Use a rubber mallet to drive the cleats on the back of the plate into the frame.

STEP 3



Place strike plate on top of reinforcing roller plate. Orient curved lip towards frame edge.

STEP 4

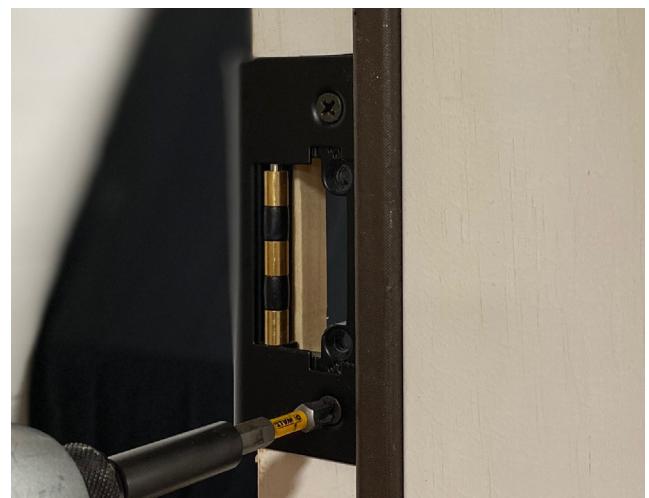


Secure the assembled strike plate with two of the provided 1/2" screws.

STEP 5




If adjustment of the strike is required to either loosen or tighten its fit with weatherstrip, first partially loosen short screws.

STEP 6

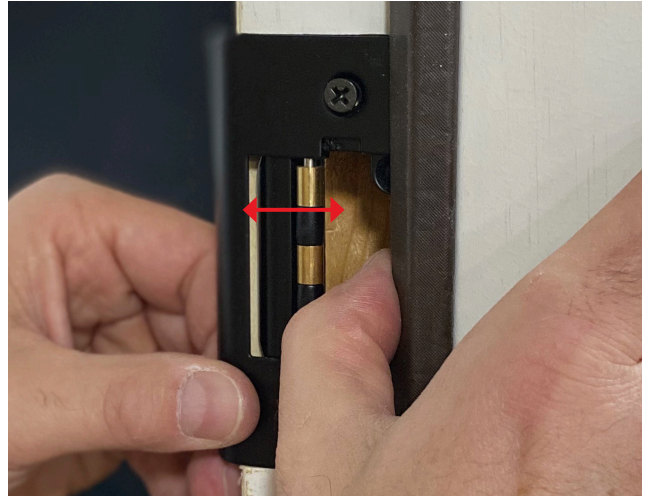

While holding top strike plate in position, move lower reinforcing plate assembly to the left or right as needed to loosen or tighten door panel fit.

STEP 7

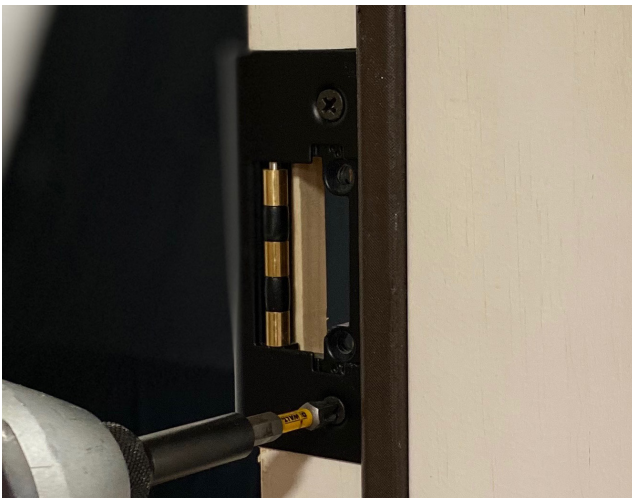

Retighten short screws to secure strike plate assembly at its adjusted position.

STEP 8



Place two of the longer 3" screws provided, through the two holes in the reinforcing roller plate.