

PanoLock+™ Multi-Point Lock Instructions

Strike Plate Assembly & Adjustment



8817 West Market Street
Colfax, NC 27235 | 800.334.2006
www.enduraproducts.com

STEP 1



Ensure strike plate mortise is clear of dust and debris.

STEP 2



Place reinforcing roller plate into frame mortise. Orient tabs toward edge of frame. Align end of tabs with edge of frame.

STEP 3



Place strike plate on top of reinforcing roller plate. Orient curved lip towards frame edge.

STEP 4



Secure assembly with two short screws provided, through strike plate.

STEP 5




If adjustment of the strike is required to either loosen or tighten fit with weatherstrip, first partially loosen short screws.

STEP 6



While holding top strike plate in position, move lower reinforcing plate assembly to the left or right – as needed to loosen or tighten door panel fit.

STEP 7

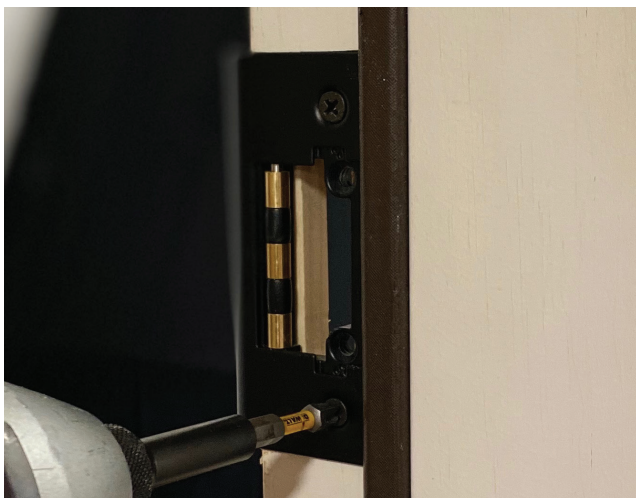

Retighten short screws to secure strike plate assembly at its adjusted position.

STEP 8



Place two long screws provided, through holes in reinforcing roller plate.